



## Ceiling Joists.

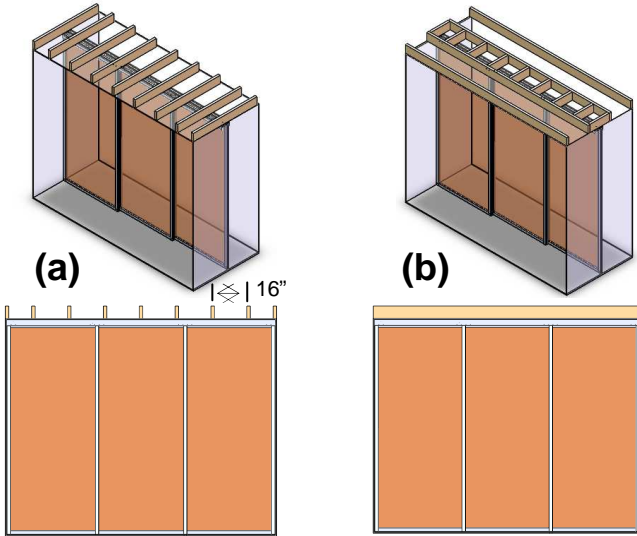

In most cases where the unit is installed under a soffit, no additional support is required. However, when installing to a ceiling, additional support may be required.

- A. If the ceiling joists run perpendicular to the installation of the track as seen in images (a). Then the only other requirement would be to insure that the track is supported at both ends, so that only 3" of track extend beyond the nearest fastener.
- B. If the ceiling joists run parallel to the track; then additional support will be required as indicated in images (b).

1.

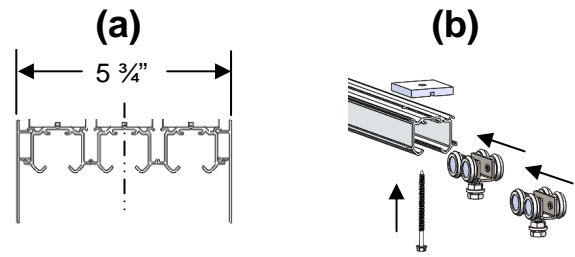


Fascia Spacer #8 X 2" Hex head Roller Assembly




- A. Determine the location of the center of the unit and mark a line across the ceiling that is perpendicular to the walls on each side.
- B. Locate the center of each ceiling joist along that line and pre-drill the track to align with the joists.
- C. Insert two (2) rollers assemblies into the track and attach the track to the ceiling using a #8 X 2" Hex head screw and fascia spacer as seen in image (b).

2.

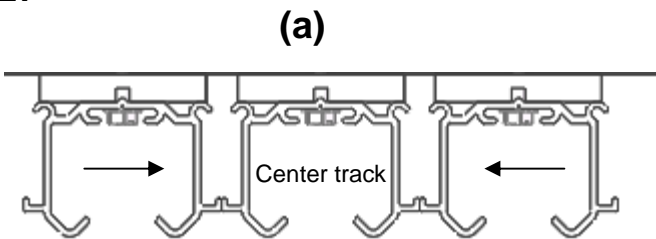

- A. To attach the outside tracks, repeat step #1. Making sure that you butt tracks against the center track as shown in image (a).

3.

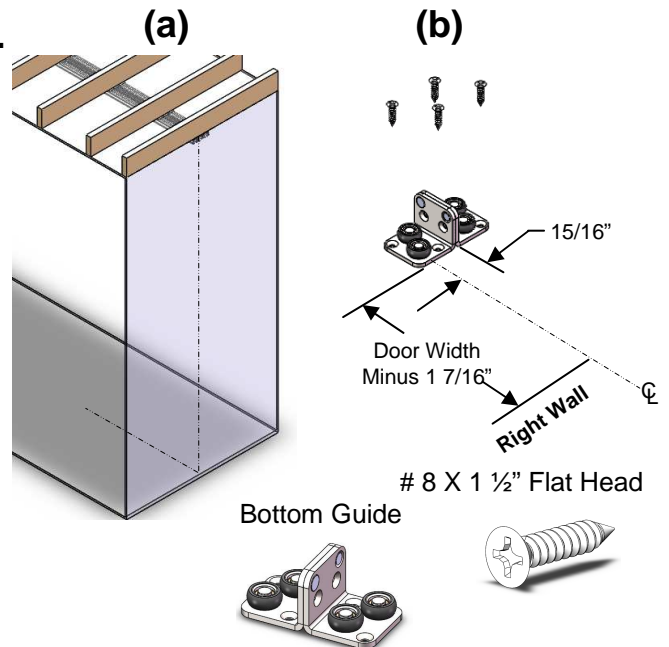


Bottom Guide

# 8 X 1 1/2" Flat Head


- A. Transfer the centerline on the ceiling to the floor as shown in image (a).
- B. Position the center of the bottom guide 15/16" behind the line and off the right wall the width of the door minus 1 7/16". Attach the guide to the floor using #8 flat head screws as shown in image (b).
- C. **These instructions are for doors that gang to the right. If the doors gang to the left, then position the bottom guide 15/16" behind the line and off of the left wall the width of the door minus 1 7/16".**

4.

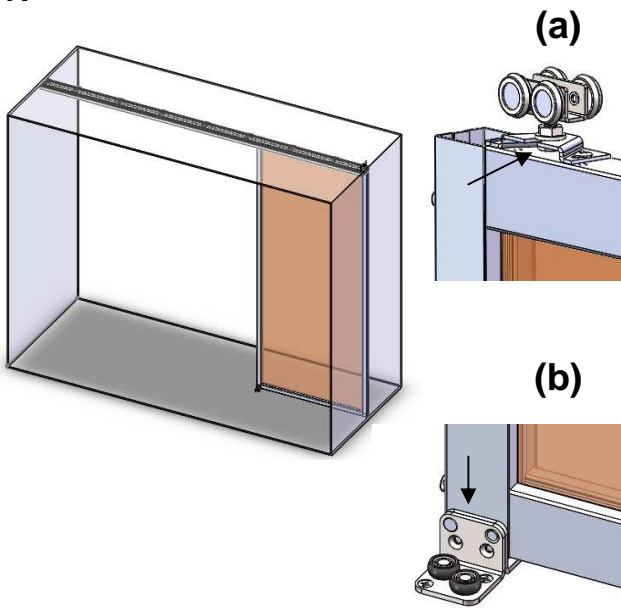


- A. Position the inner most door over the bottom guide as shown in image (b) and engage the roller assemblies into the roller brackets as shown in image (a).

5.

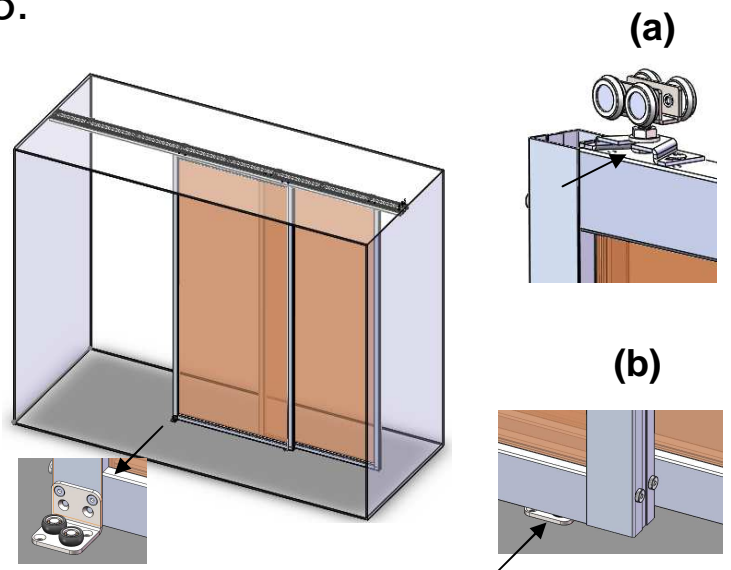


- A. Position the middle door over the bottom guide as shown in image (b) (This door has a guide mounted to the stile) and engage the roller assemblies into the brackets as shown in image (a).

6.

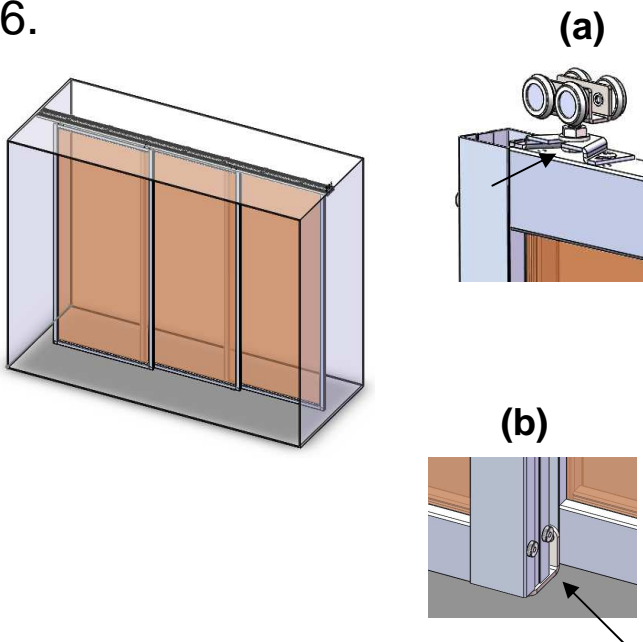

- A. Position the outer most door over the bottom guide mounted to the middle door stile as shown in image (b) and engage the roller assemblies into the brackets as shown in image (a).

7.

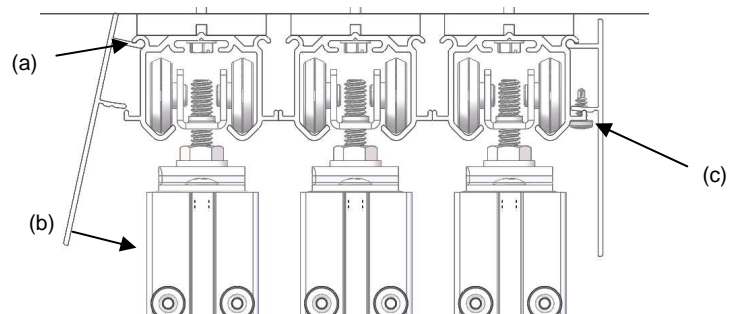

- A. Engage the fascia into the track as shown in image (a).  
 B. Rotate the fascia down until it snaps into place as shown in image (b).  
 C. Secure the fascia with a #6 TEK screw at each end as shown in image (c).  
 D. Repeat the process on the opposite side.